



Product-Information

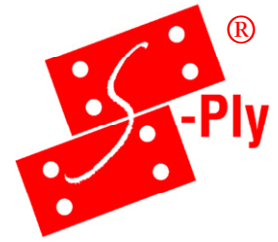

Leaf Spring Installation

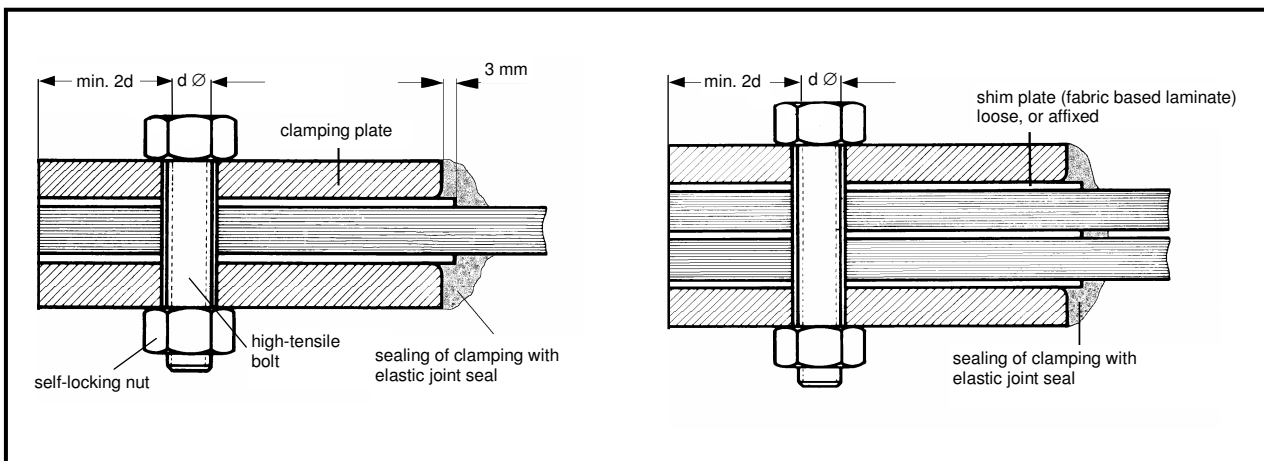

Directions for the replacement of single leaf-springs and leaf-spring-packs:

- Clean clamping plates completely of remainders of corrosion.
- Use new, high-tensile bolts.
- If fitted and required: Replace shim plates.
- Check on correct torque of nuts after 10^5 alternation of loads.
- The lower clamping must be sealed. This procedure is essential if the transported material or other process related substances could contaminate the clamping area of the leaf spring, where it contributes to accelerated delamination.

Created: 05/2006